

BCR-42C ASSEMBLY INSTRUCTIONS

PART LIST	
1-RING	
4-POLE	
1-FRAME	
1-CROSS	
4-PUTTON	
4-LEG	
4-LEVELER	

